
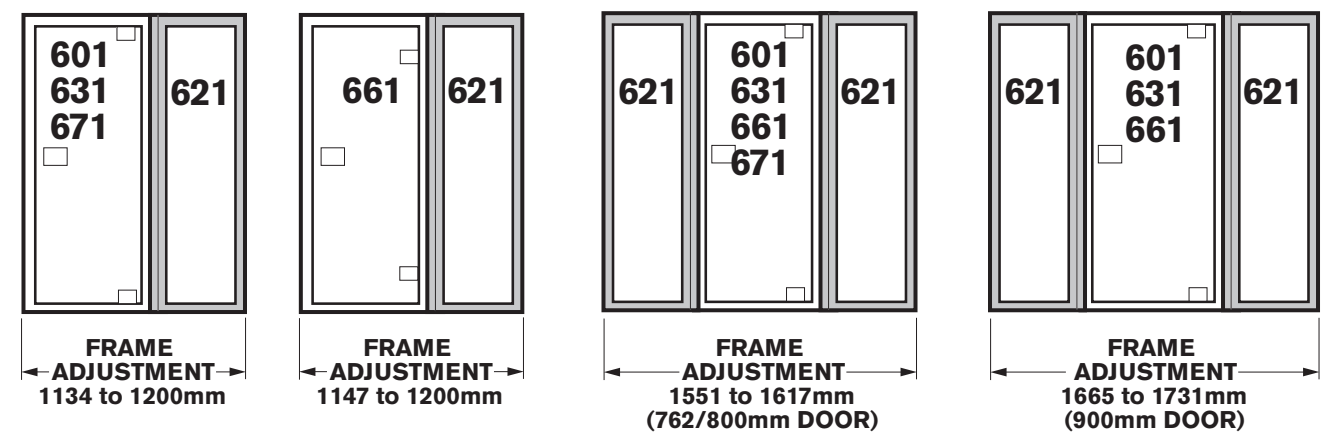
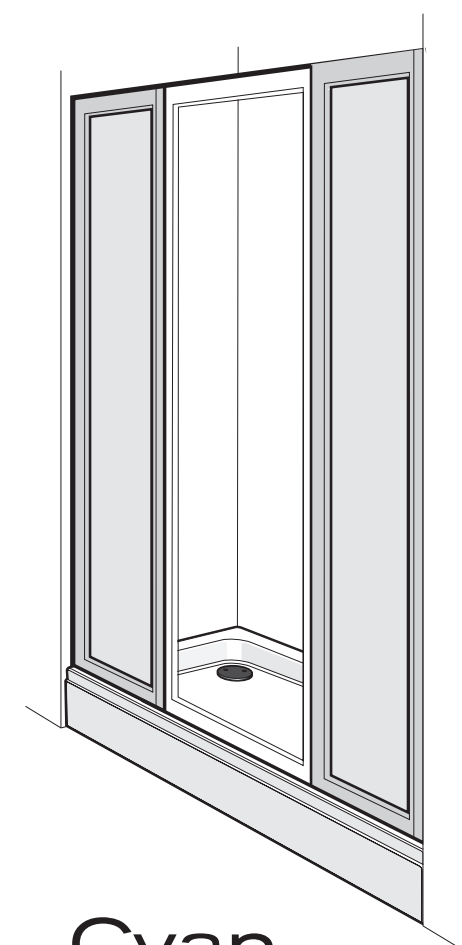
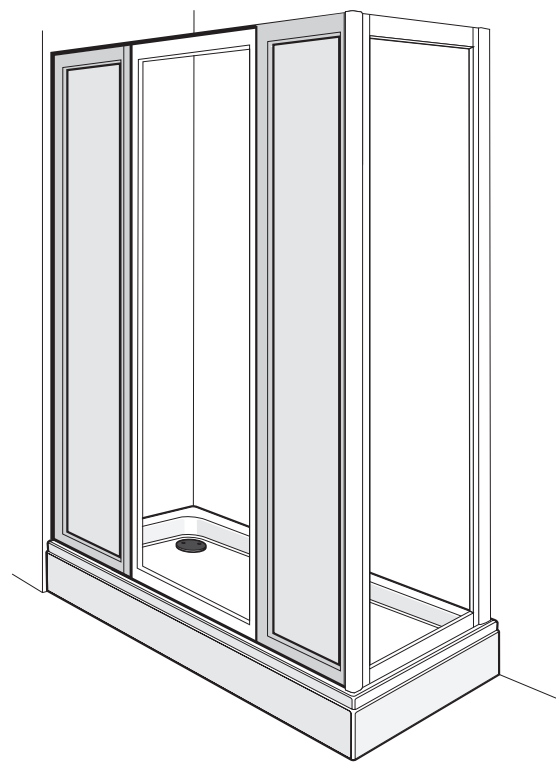
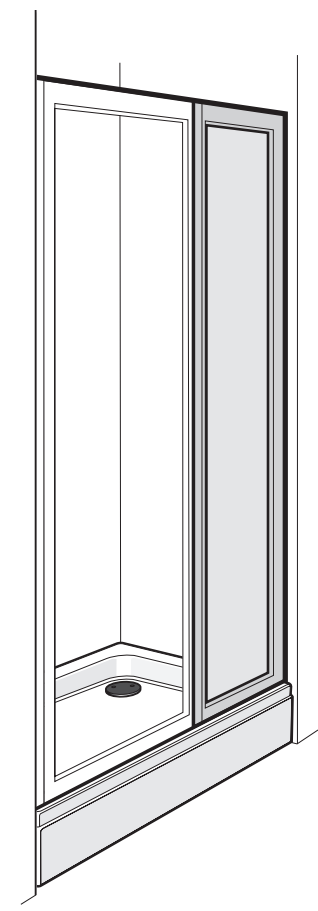


These items can be found in the door parts pack

x12
x8
x8
3mm
8mm

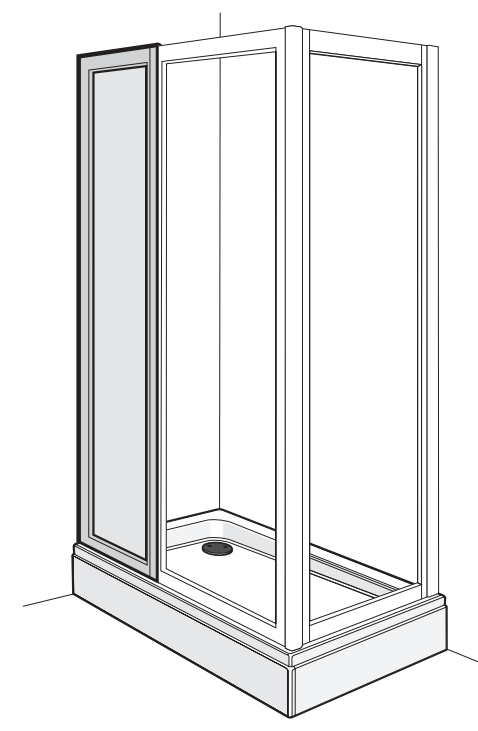

RECOMMENDED SAFETY PRECAUTIONS

Protective footwear when lifting panels


Safety glasses when drilling

Cyan in-line panel (621)

Made in the UK by:
Kohler Daryl Limited
 Alfred Road, Wallasey, Wirral, CH44 7HY England
 Tel 44 (0)151 606 5000 Fax 44 (0)151 638 0303
 www.daryl-showers.co.uk
 E-mail Daryl@daryl-showers.co.uk



44 (0)151 606 5000

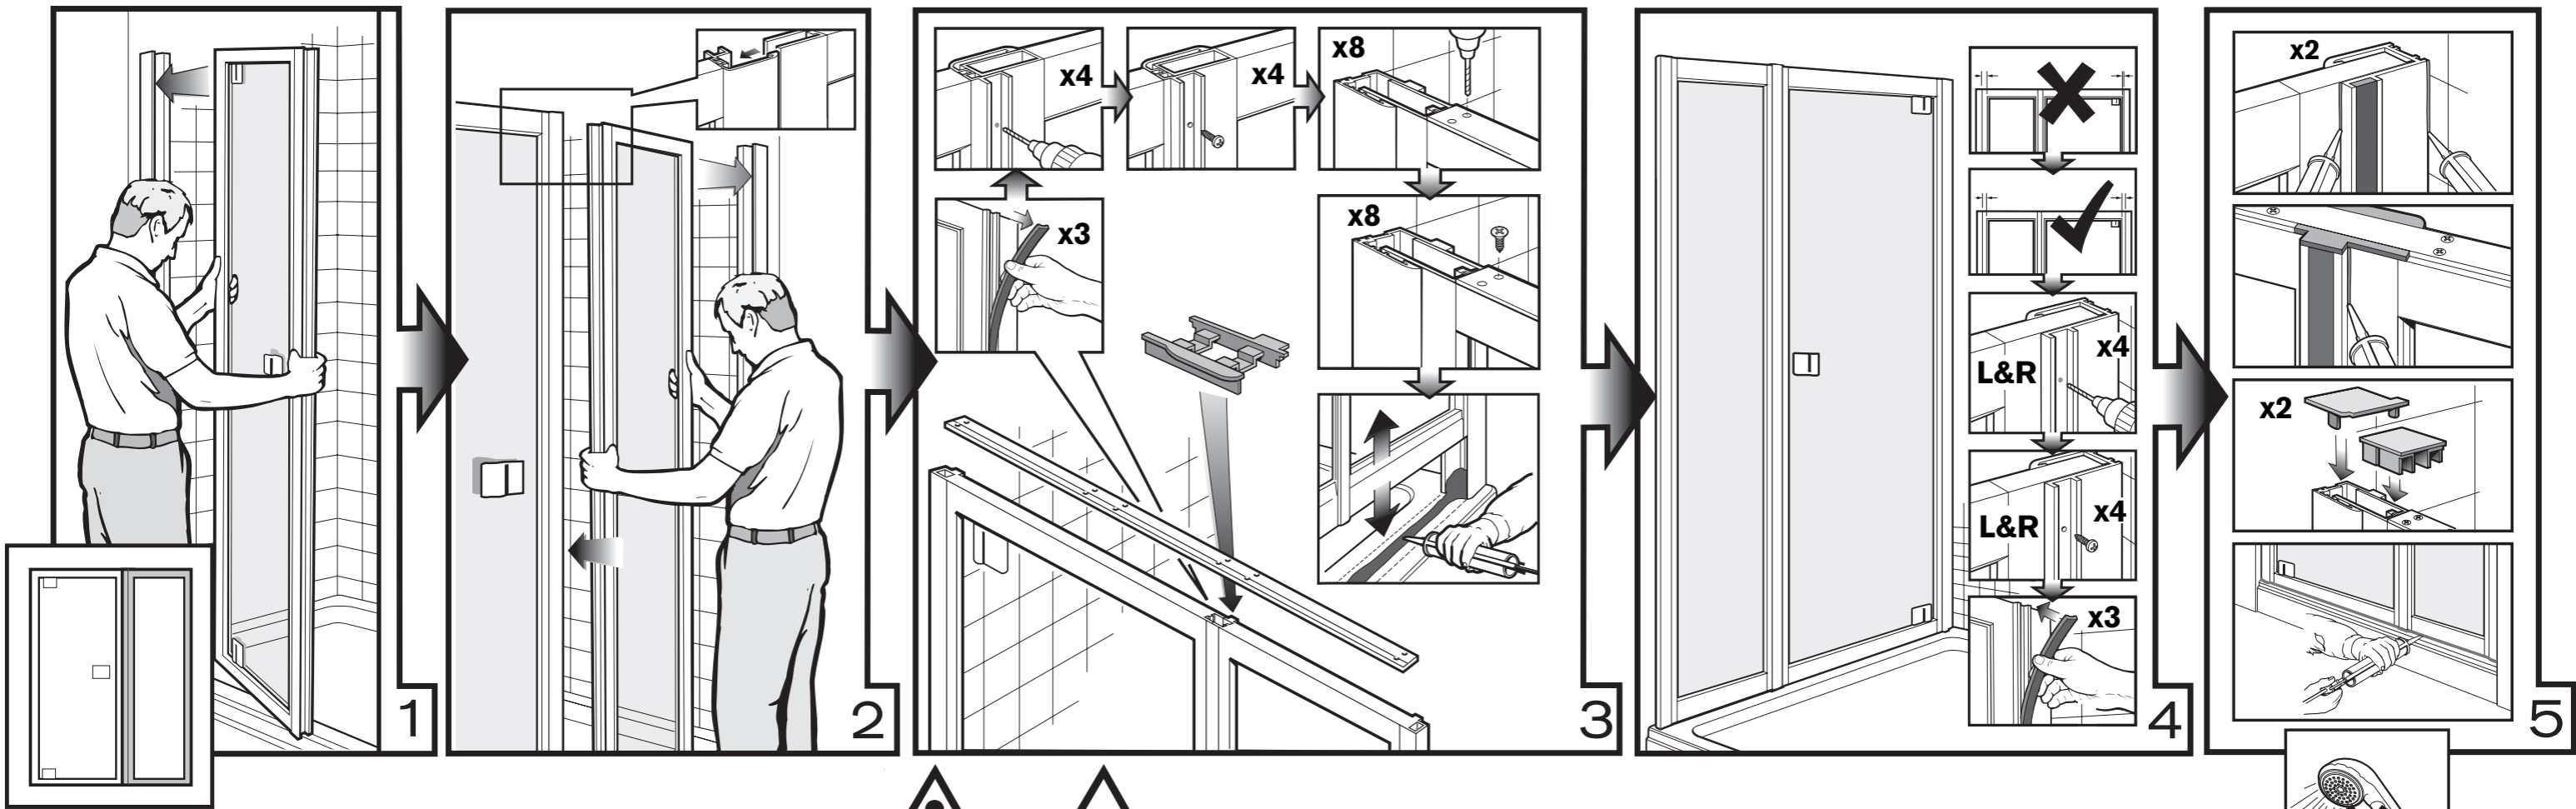

NOTE: BOTH WALL CHANNELS MUST BE INSTALLED BEFORE FITTING INLINE PANELS.



24 hrs

